INSTALLATION INSTRUCTIONS FOR PART 99-7611

APPLICATIONS

Nissan Rogue 2011-up
99-7611

KIT FEATURES

- ISO DIN head unit provision with pocket
- DDIN head unit provisions

KIT COMPONENTS

- A) Radio Housing • B) Radio Housing Brackets • C) DDIN Trim Plate

A

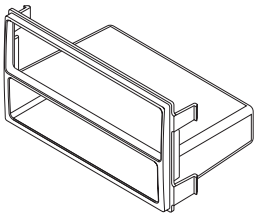

B

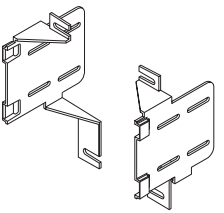

C

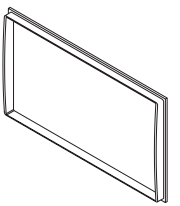

WIRING & ANTENNA CONNECTIONS (Sold Separately)

Wiring Harness:

- 70-7552 - Nissan harness 2010-up

Antenna Adapter:

- 40-NI12 - Nissan antenna adapter 2010-up

TOOLS REQUIRED

Panel Removal Tool • Phillips Screwdriver • Socket Wrench

© COPYRIGHT 2004-2011 METRA ELECTRONICS CORPORATION

Table of Contents

Dash Disassembly

– Nissan Rogue 2011-up 3

Kit Assembly

– ISO DIN head unit provision with pocket 4
– DDIN head unit provisions 5

Caution

Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.

****NOTE: Refer also to the instructions included with the aftermarket radio.***

KNOWLEDGE IS POWER
Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.

Metra recommends MECP certified technicians

Dash Disassembly

1. If equipped with center speaker: Unclip and remove the grille then remove (4) Phillips screws to remove the speaker. (Figure A)
2. Unclip and remove the panel below the radio including the a/c controls. (Figure B)
3. Unclip the radio trim including the a/c vents then unplug the hazard switch and remove the panel. (Figure C)
4. Remove (4) Phillips screws securing the radio. (Figure D)

Continued on next page

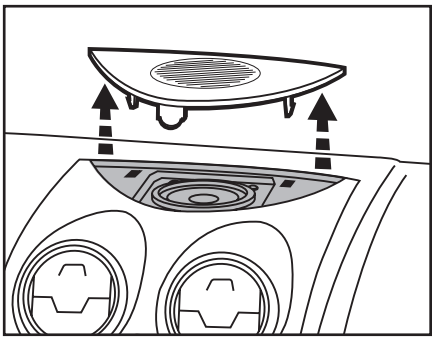

(Figure A)

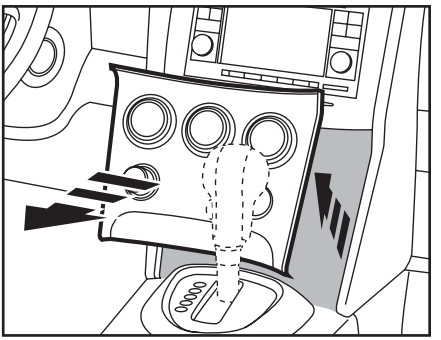

(Figure B)

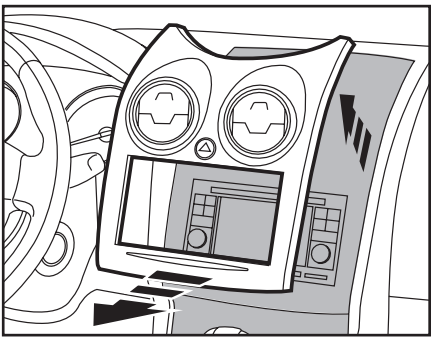

(Figure C)

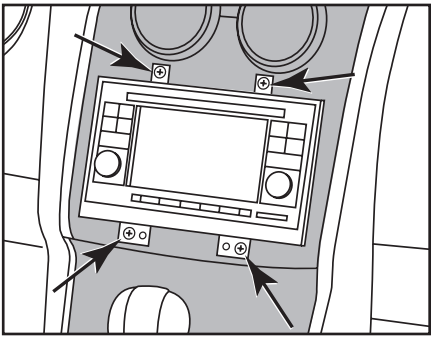

(Figure D)

ISO DIN head unit provision with pocket

1. Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXXESS. Re-connect the negative battery terminal and test the unit for proper operation.
2. Snap the radio housing brackets to the radio housing. (Figure A)
3. Slide the head unit into the radio opening (from behind) and secure with the screws supplied with the unit. (Figure B)
4. Reassemble dash in reverse order of disassembly.

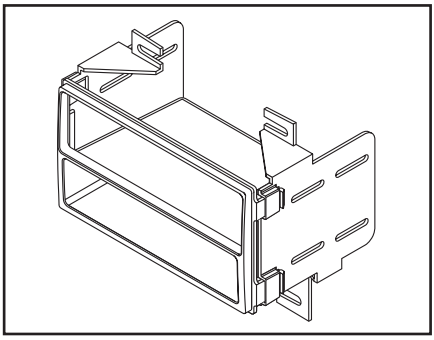

(Figure A)

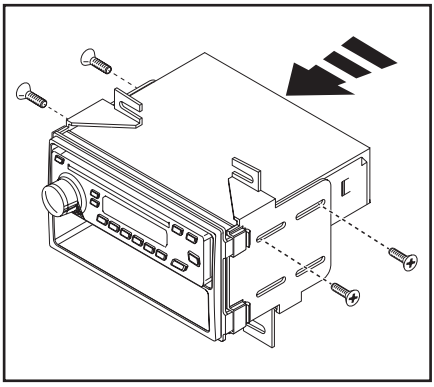

(Figure B)

DDIN head unit provisions

1. Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXXESS. Re-connect the negative battery terminal and test the unit for proper operation.
2. Mount the radio housing brackets to the sides of the double DIN radio using screws supplied with the double DIN radio. (Figure A)
3. Place the DDIN trim plate on the front of the DDIN radio. (Figure B)
4. Reassemble dash in reverse order of disassembly.

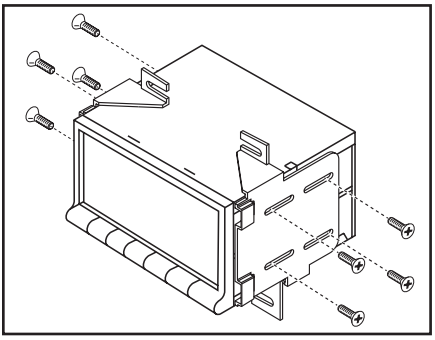

(Figure A)

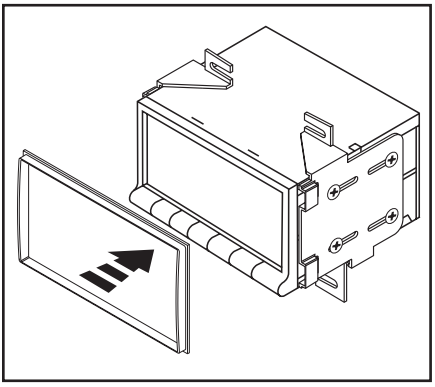

(Figure B)

Notes

REV. 8/08/11

© COPYRIGHT 2004-2011 METRA ELECTRONICS CORPORATION